

# Profoto Beauty Dish

## User Guide



# **Profoto Beauty Dish**

## **User Guide**

Congratulations on acquiring a Profoto Beauty Dish!

This guide has been made to provide you with all the essential information you need to quickly familiarize yourself with your new Beauty Dish and start light shaping in no time.

**Get started with your new  
Profoto Beauty Dish**



The Profoto Beauty Dish is quick and easy to assemble. Unfold the softbox by retracting the ring upwards until it clicks. Use the protuded part of the plate as support.



Always unfold your Profoto Beauty Dish separately and then attach it to your flash.

When in position, use the clasp to secure the Beauty Dish onto the flash.



The Profoto Beauty Dish is just as easy to disassemble when you are done. Quickly fold it by pressing the unlock section. Always disassemble your Profoto Beauty Dish when removed from the flash.



Once unfolded, attach the deflector plate by hanging the snap hooks onto the fabric loops located inside the Beauty Dish.



The Profoto Beauty Dish has a circular front edge, providing perfectly round catchlights in the subject's eyes.





The Profoto Beauty is compatible with all Profoto flatfronted lights.

The Profoto Beauty dish is **not** compatible with protruded heads, such as the ProHead.



When you are done using the Beauty Dish, secure it by using the attached strap to keep it compact, and then carefully place it back into its designated case.

**Let's start creating with your  
new Profoto Beauty Dish!**

**For more information and inspiration:**

[profoto.com](http://profoto.com)